


# Elemental Garage




## "Digitized Max" - 1967-1972 C10 Gauge Bezel for the Holley 12.3" Dash (# 553-111)


**Step 1:** Lay a soft surface on your workbench to protect your bezel. Then, flip your "Digitized Max" gauge bezel over so the back is facing up. You should see multiple threaded bosses, and two L-shaped locator tabs at the bottom. Place your Holley 12.3" so it rests in the opening between the two L tabs.

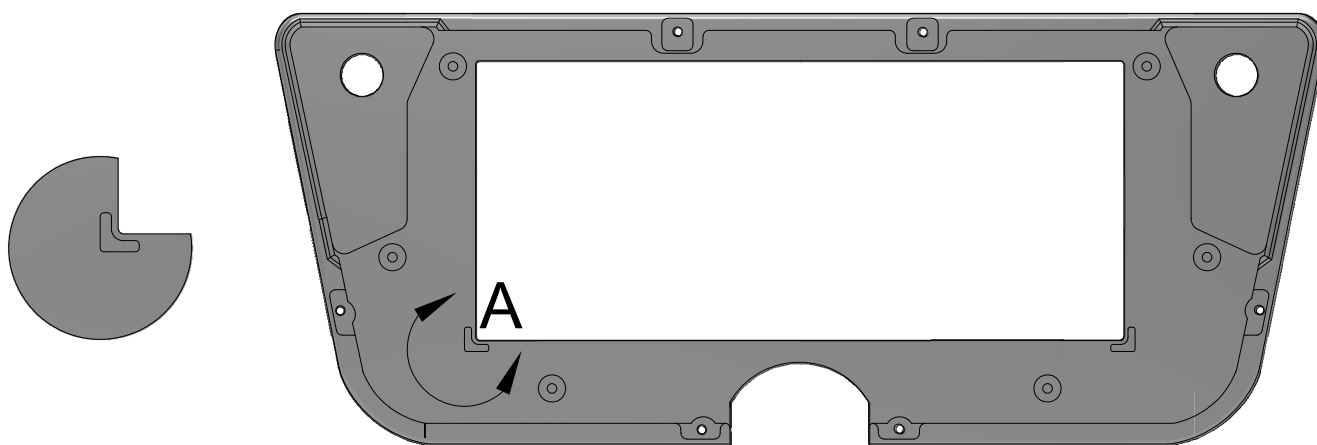

**Step 2:** Place the left and right mounting brackets on top of the Holley 12.3". Look for the "L" and "R" to indicate the correct side. After lining up all the holes use two (2) 1/4-28x0.75" screws to secure each bracket to the Holley 12.3" gauge, but do not fully tighten. Then use three (3) 1/4-20x1.25" screws to secure the brackets to the bezel. Note, the screws for the gauge are a different length and pitch than the screws for the bezel. Once all screws are started, tighten them, being careful not to overtighten. An eighth of a turn past finger tight is sufficient.

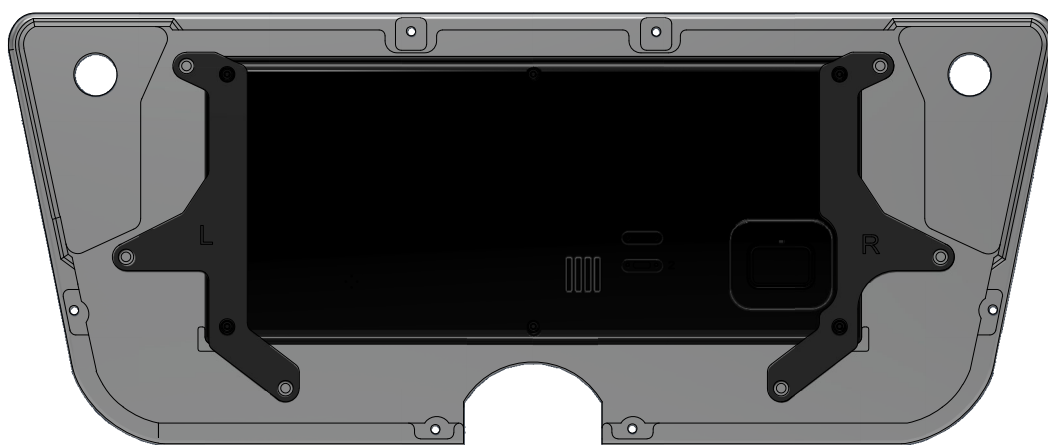

**Step 3:** Now, take the assembled bezel and use six (6) #8 screws to secure the Digitized Max to your C10 dash sheetmetal. Again, install each loosely, and once all are started slowly tighten each one. Do not overtighten.

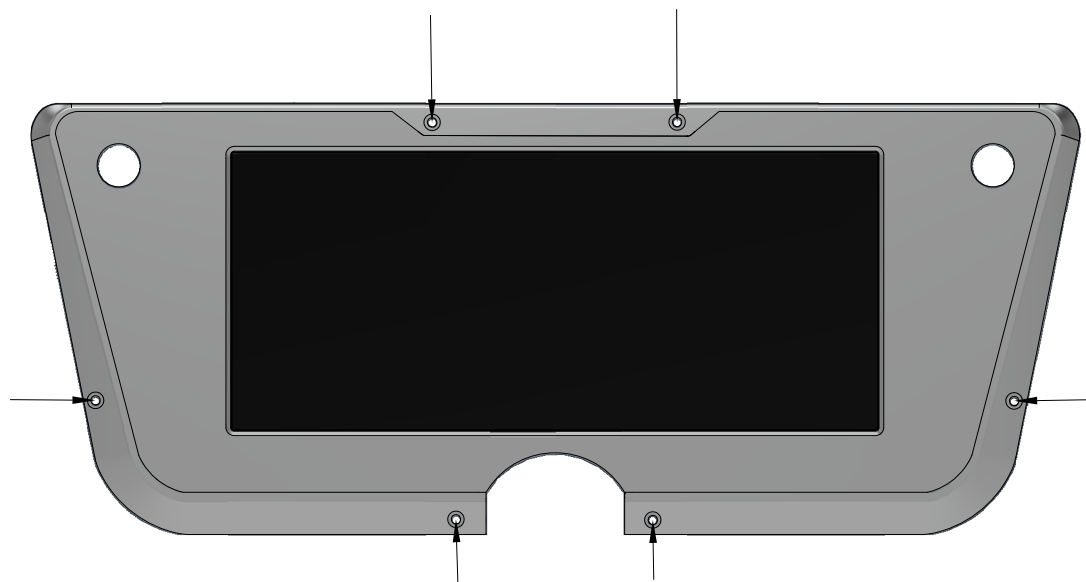

**Congratulations, you have now installed your Holley 12.3" gauge and Digitized Max gauge bezel! If you have any issues or questions send us an email at [buildit@elementalgarage.com](mailto:buildit@elementalgarage.com)**