



Elemental Garage




Installation instructions | "Hal" - 1967-1972 C10 Gauge Bezel for the Haltech 10" Dash (# uC-10)

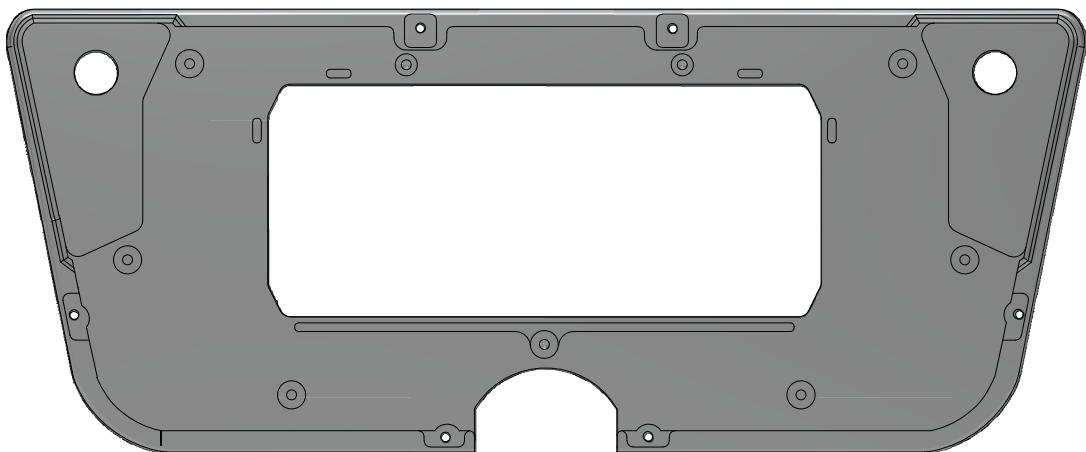

Step 1: Lay a soft surface on your workbench to protect your bezel. Then, flip your "Hal" gauge bezel over so the back is facing up. You should see multiple threaded bosses, and a framework of locating tabs around the bezel's center opening. Place your uC-10 Haltech gauge so it rests in the opening between the framework of locating tabs.

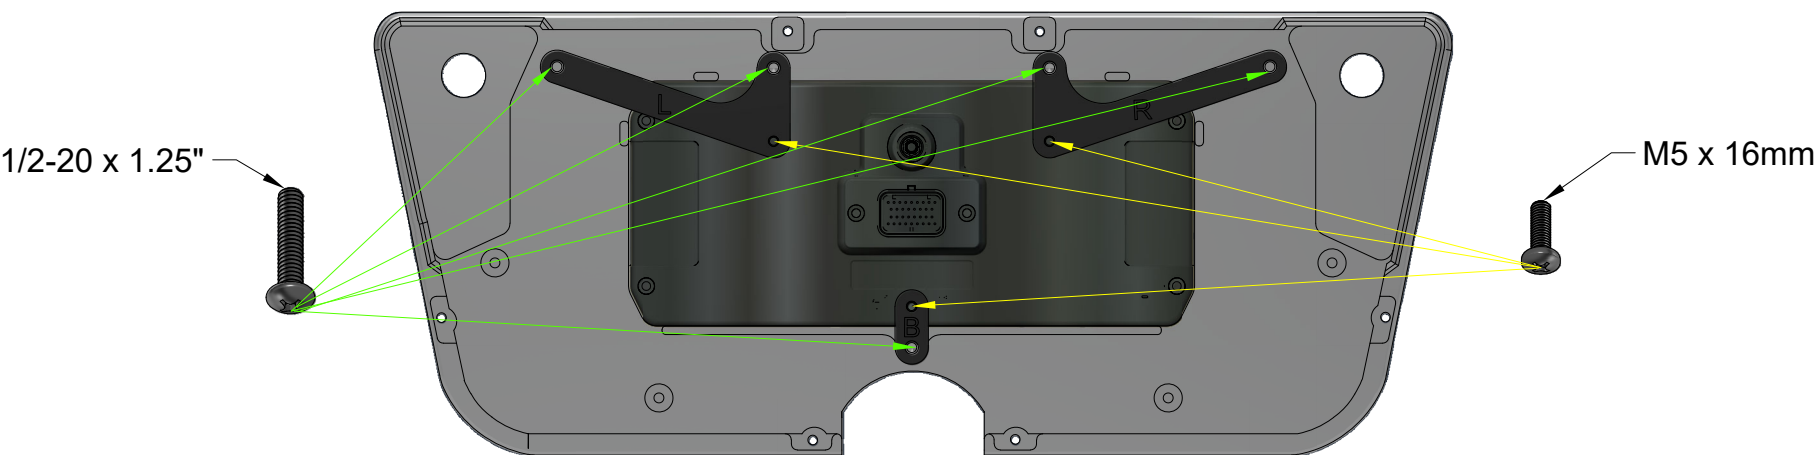

Step 2: Mounting brackets are labeled "L, R, and B" and coorespond to their left, right, and bottom positions. Line them up to the threaded bosses on the bezel and the uC-10 as shown above. Use the M5x16mm screws to attach the brackets to the uC-10, but do not fully tighten. Next, use the 1/2-20 x 1.25" screws to attach the brackets to the Hal bezel, but do not fully tighten. Verify the uC-10 is still in the locating tabs. Tighten all screws to one-quarter turn past finger tight. The uC-10 should be firmly mounted.

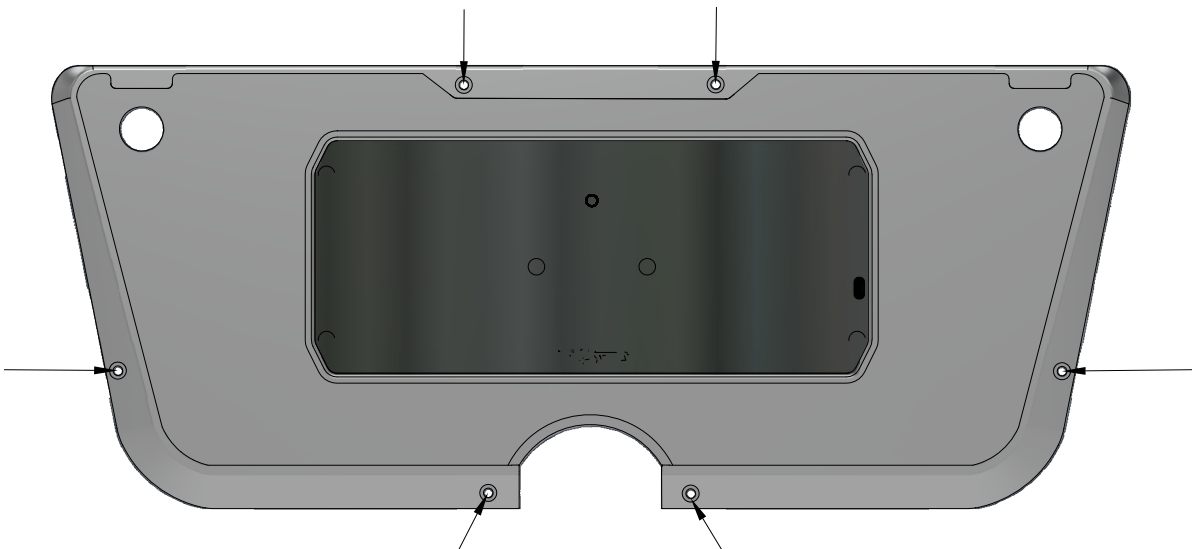

Step 3: To attach your assembled Hal and uC-10 to your vehicle use the six (6) included #8 screws in the indicated locations. Please note, you will need to lower your steering column to fit this gauge and bezel. You can use one of our column lowering kits, or fabricate a custom solution to accomplish this.

Congratulations on your Hal bezel and uC-10 display installation! Please follow Haltech instructions for setting up your uC-10 gauge.